

Egro Preventative Maintenance

Maintenance Cycle 2 (80,000 cycles or 2 years)



Basic Kit 99PM2-EBASIC14

	Check and Clean
	Lubricate
	Replace

To Do	Description	PN No.	Qty.	Fig.	Pos.
	Clean: brewing screen, upper piston head			A	5, 22, 23
	Clean: brewing screen, lower piston head			A	5, 10
	Replace: lower piston Turcon gasket	00039064	2	A	8
	Replace and Lube: lower piston red silicone O-ring	00100136.001	2	A	7
	Replace and Lube: brewing O-ring	00100506.001	1	A	9
	Lubricate: both motor spindles				
	Clean: coffee brewing chamber			A	28
	Check: wiring on spindle motors, piston shaft magnet			A	11, 33
	Clean: coffee ejector and funnel			A	26, 35
	Replace: drain tray O-rings	36405002/00002240	2	B	17
	Clean: wash out the puck bin			B	10
	Clean: wash the drain tray and drain grate			B	15, 16
	Clean: dust the top lid			B	5
	Replace: brewing spout assembly	10701391	1	C	24
	Check: tighten the spout bracket if needed			C	20
	Check: tighten front panel hinges if needed			C	8
	Replace: milk exhaust Y connector *if applicable	69200162	1	D	5
	Replace: drain hose	36901804	1	D	13
	Replace: 3-way brew plunger	00100149.001/34040178	1	E	3
	Replace: O-ring 8.73x1.78mm*	00100038.001	1	E	21
	Check and Replace: AV valve	10060060	1	F	20
	Check and Replace: pressure relief valve	00054926	1	F	21
	Replace: elbow connector	69200141	1	F	31
	Clean: wipe scale off level probe			F	8
	Replace: hot water 2-way plunger	34049013	1	G	23

Egro Preventative Maintenance


Maintenance Cycle 2 (80,000 cycles or 2 years)

Basic Kit 99PM2-EBASIC14



	Check and Clean
	Lubricate
	Replace

FIGURE A

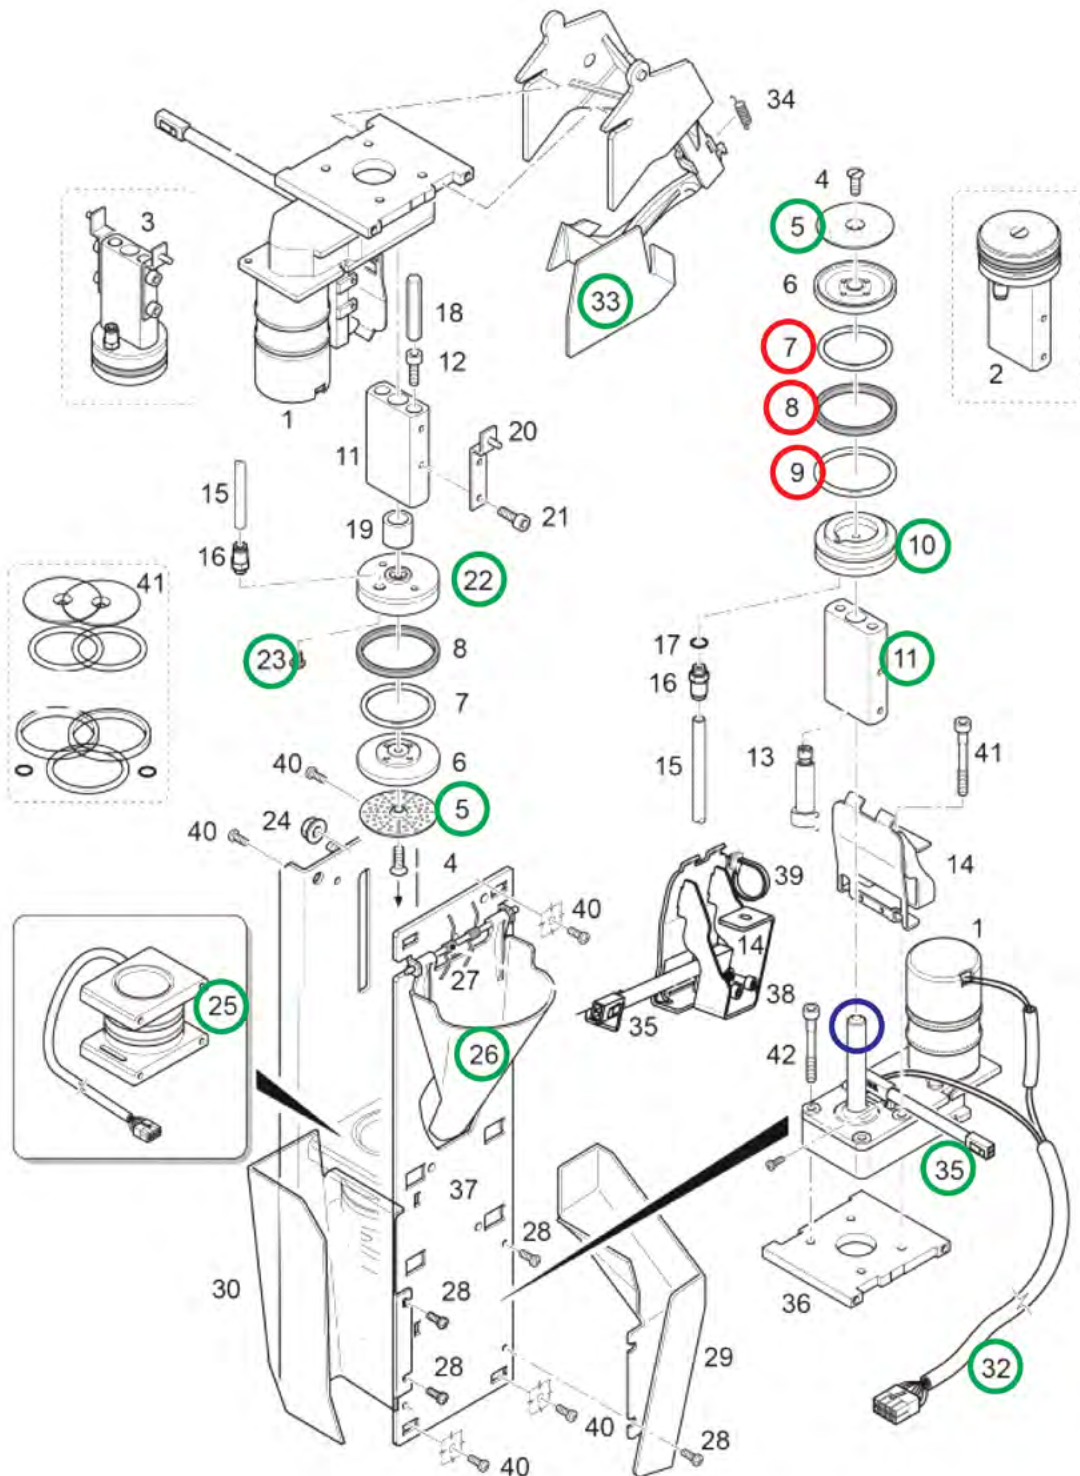

Egro Preventative Maintenance


Maintenance Cycle 2 (80,000 cycles or 2 years)

Basic Kit 99PM2-EBASIC14



	Check and Clean
	Lubricate
	Replace

FIGURE B

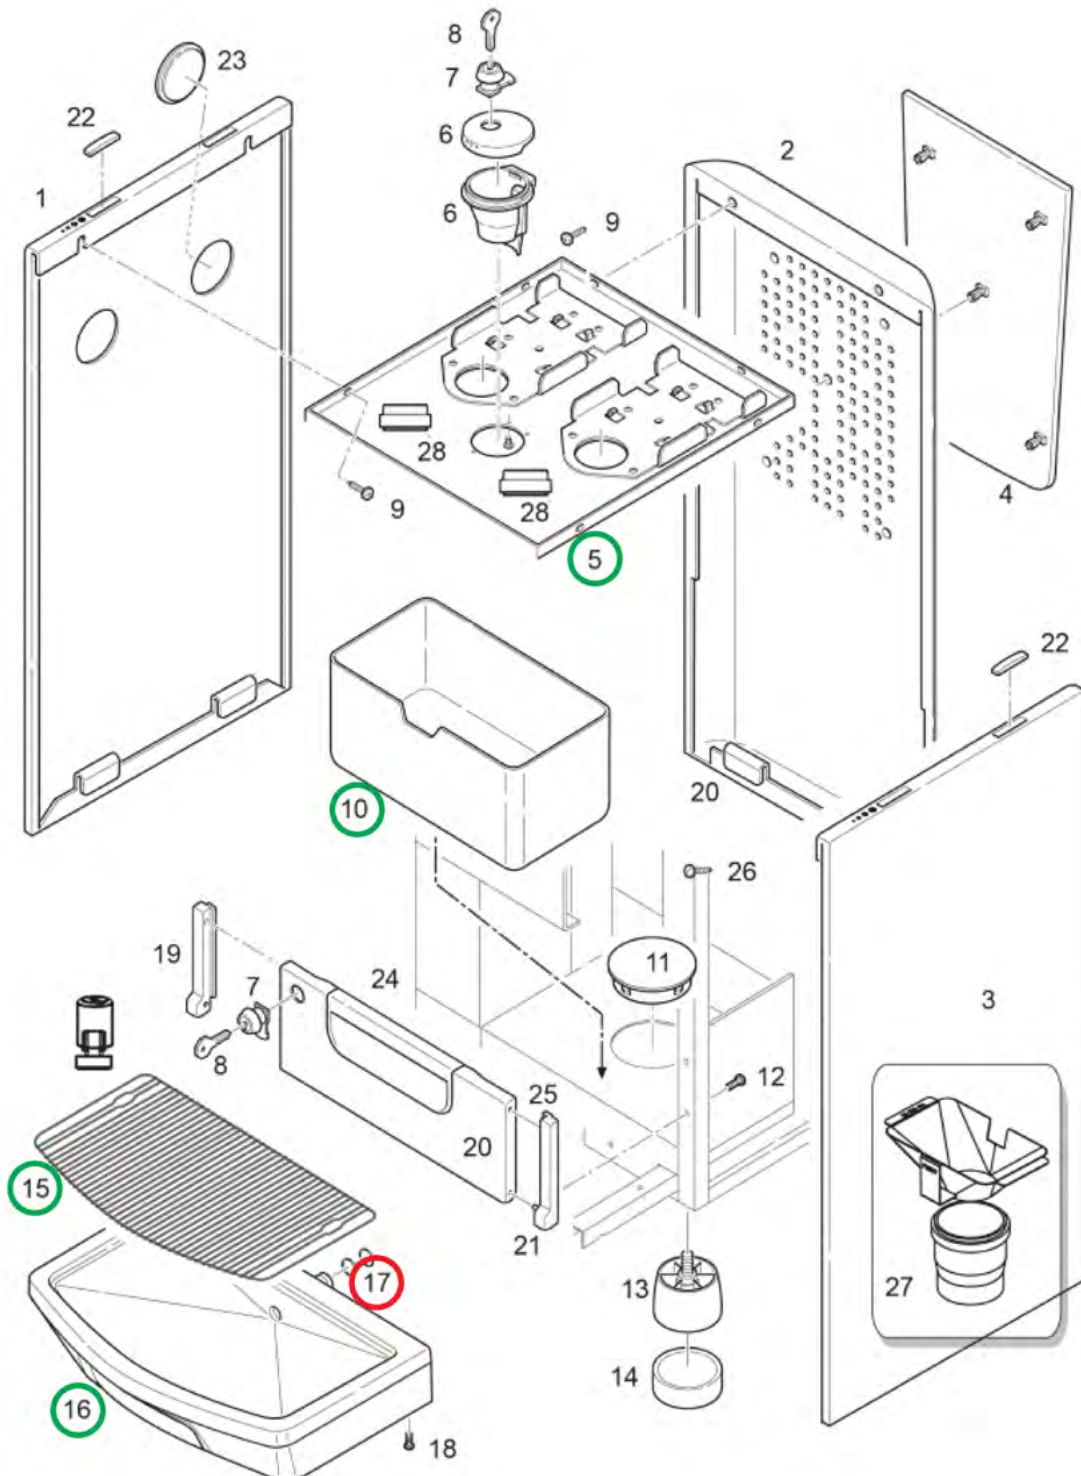

Egro Preventative Maintenance


Maintenance Cycle 2 (80,000 cycles or 2 years)

Basic Kit 99PM2-EBASIC14



	Check and Clean
	Lubricate
	Replace

FIGURE C

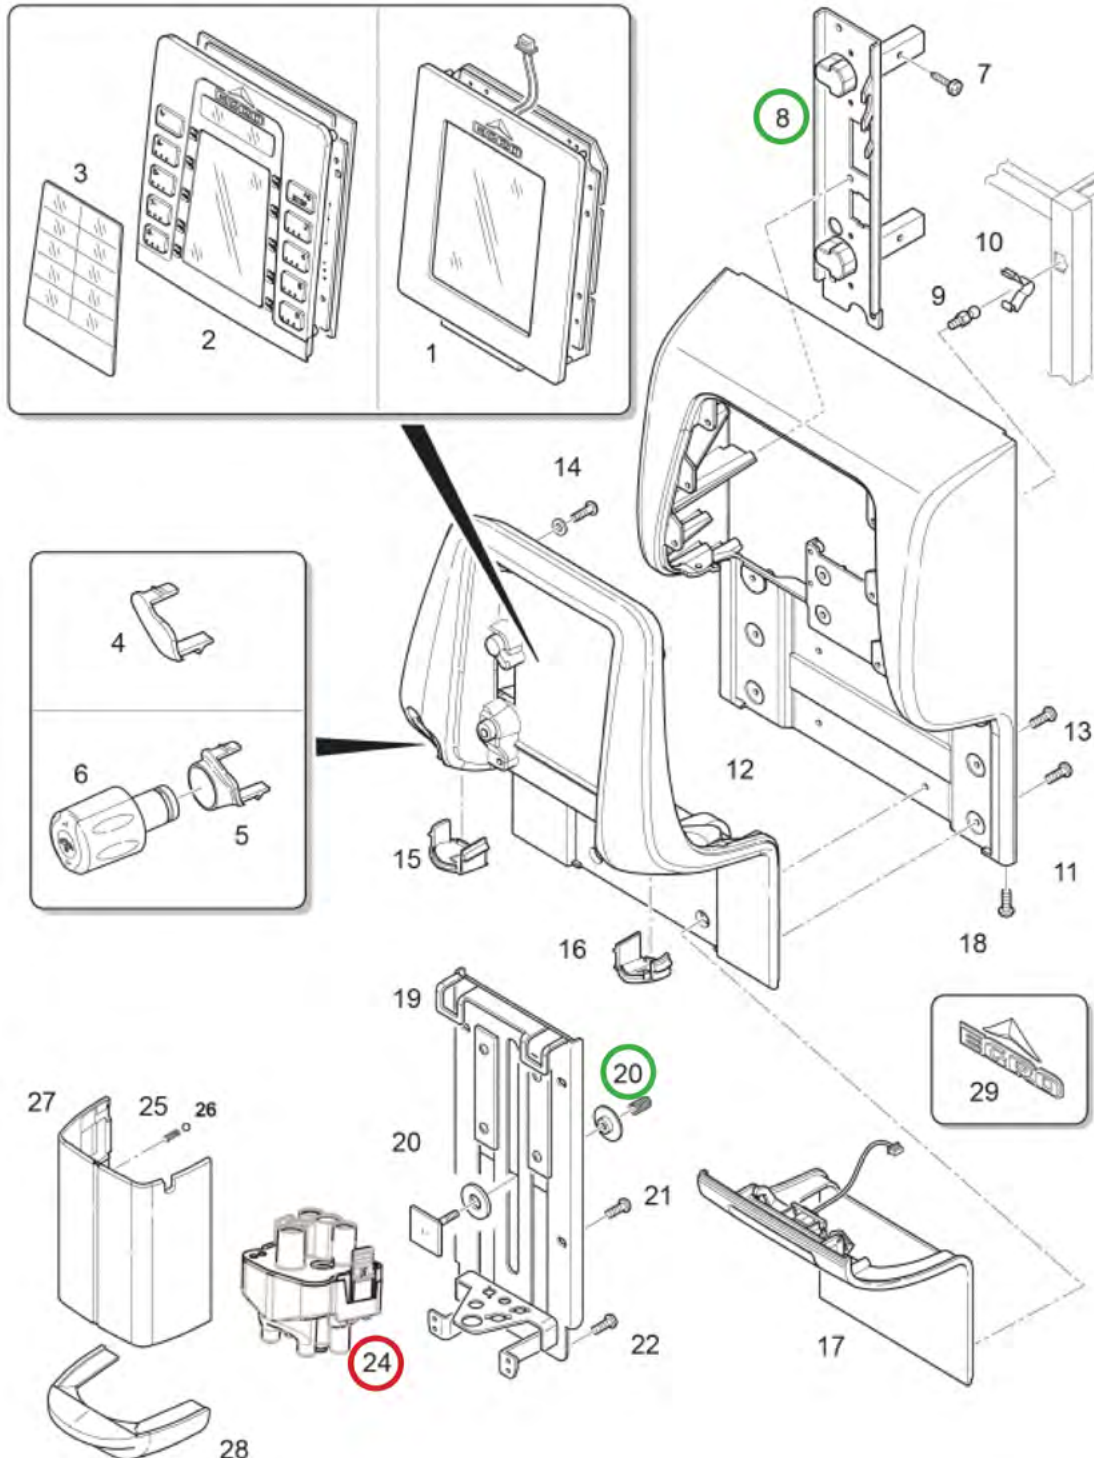

Egro Preventative Maintenance

Maintenance Cycle 2 (80,000 cycles or 2 years)

Basic Kit 99PM2-EBASIC14






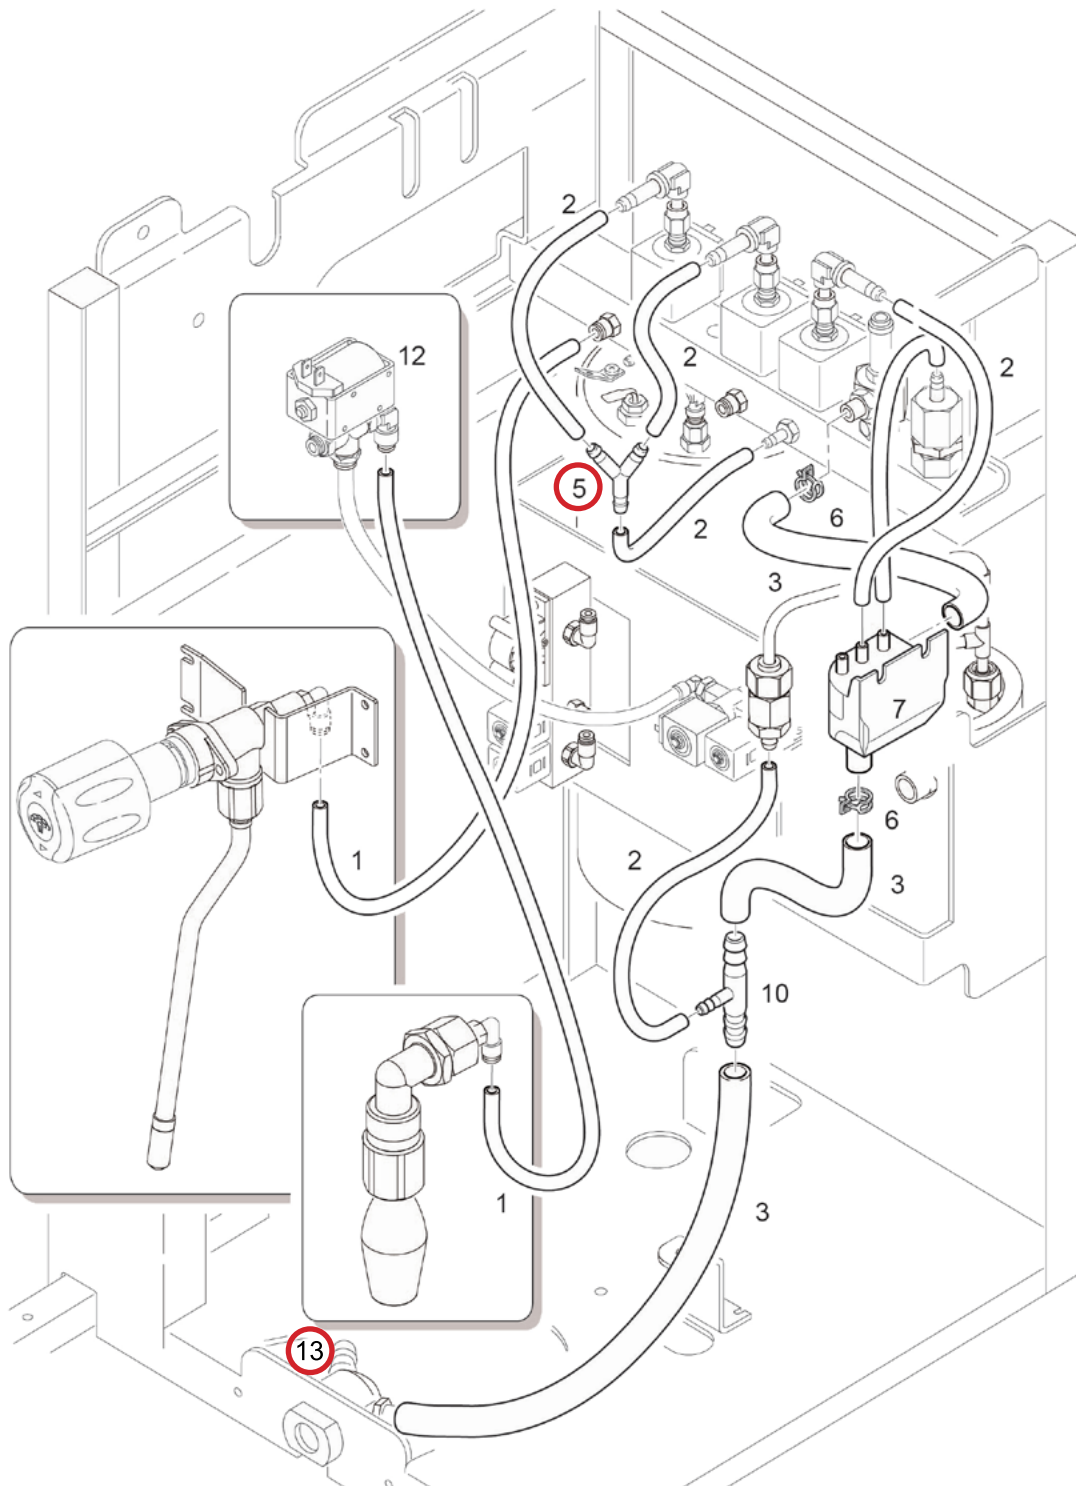
	Check and Clean
	Lubricate
	Replace

FIGURE D



Egro Preventative Maintenance


Maintenance Cycle 2 (80,000 cycles or 2 years)

Basic Kit 99PM2-EBASIC14



	Check and Clean
	Lubricate
	Replace

FIGURE E

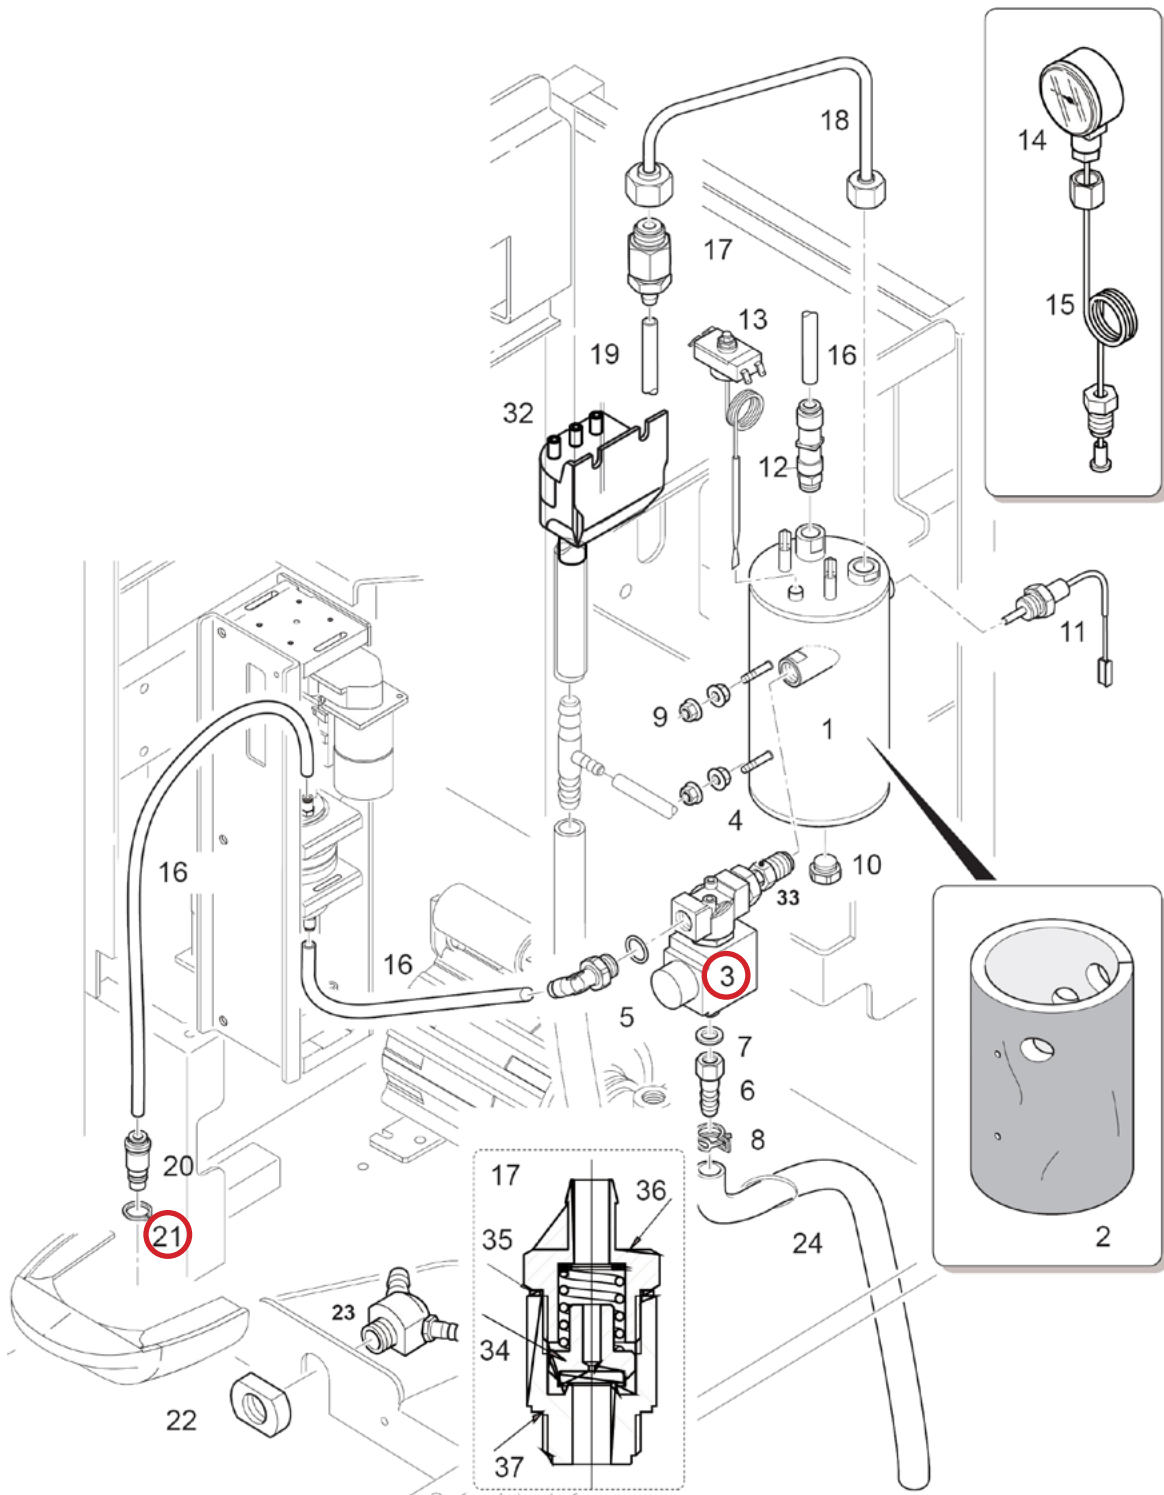

Egro Preventative Maintenance


Maintenance Cycle 2 (80,000 cycles or 2 years)

Basic Kit 99PM2-EBASIC14



	Check and Clean
	Lubricate
	Replace

FIGURE F

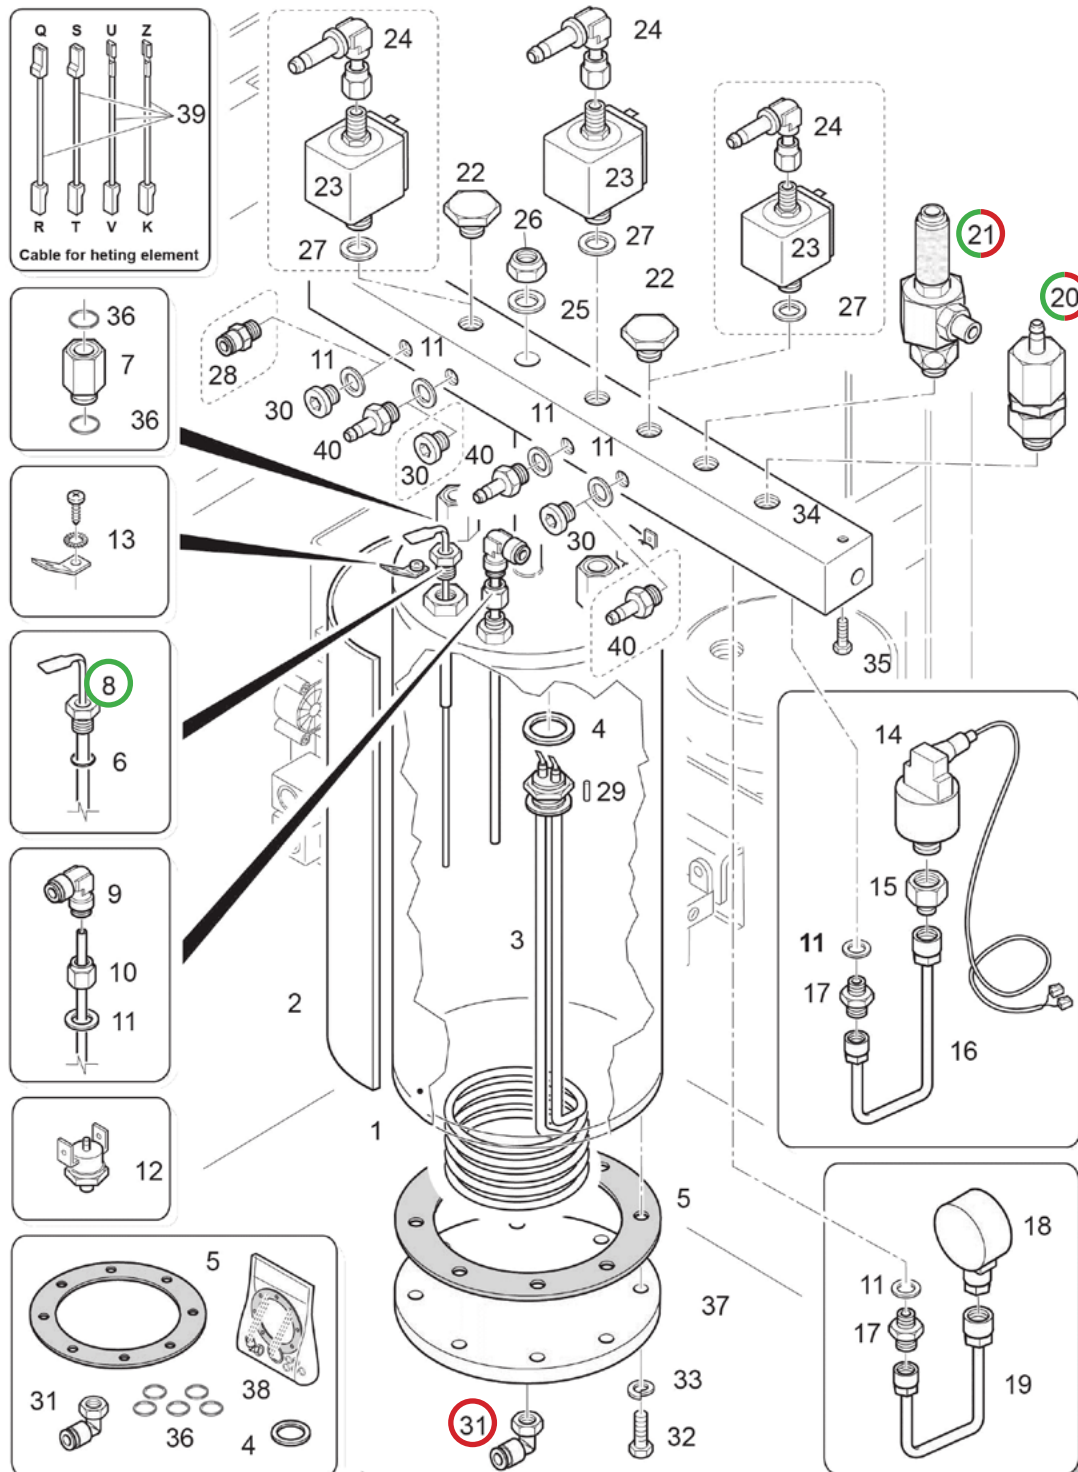

Egro Preventative Maintenance

Maintenance Cycle 2 (80,000 cycles or 2 years)

Basic Kit 99PM2-EBASIC14

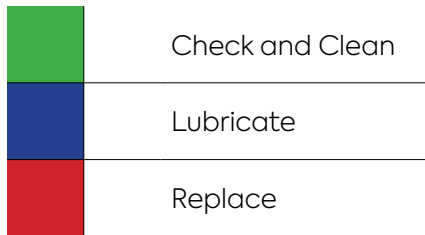


FIGURE G

